

Please Read ALL Instructions Before Installing Your New PIKEPASS Portable


READ THIS FIRST!

- Remove any existing Oklahoma PIKEPASS from your windshield. You can only have one Oklahoma PIKEPASS installed.
- You **MUST** correctly install the PIKEPASS Portable before traveling on Oklahoma turnpikes.

The PIKEPASS Portable must be installed according to instructions to work properly. DO NOT set it on the dash, store in the glove compartment, or attach to any unapproved location as this could result in missed reads and incorrect charges to your account.

- For metalized windshields, visit our website or contact us for more detailed information on Special Vehicles.

Figure 1. Back of PIKEPASS Portable showing suction cup tabs.

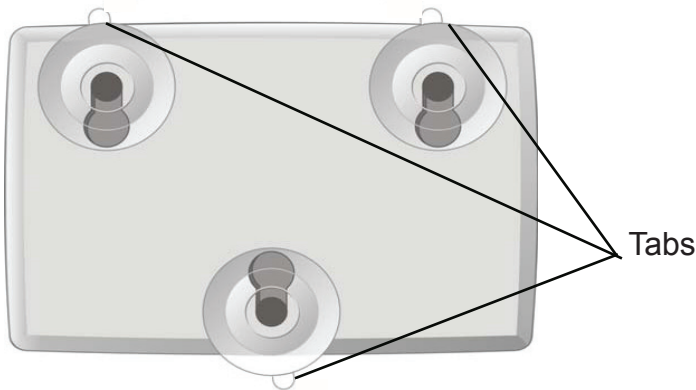

If you need to remove it from the windshield, pull the suction cup tabs away from the windshield. Be careful not to hit the rear view mirror. To replace it on the windshield, press it into place.


Thank you for choosing PIKEPASS!

For more details go to: www.pikepass.com


CONTACT US:

PIKEPASS Customer Service Center
4401 W. Memorial Rd, Ste 130
Oklahoma City, OK 73134-1722
Phone: 1-800-745-3727
Fax: 405-751-5248
E-mail: pikepass@pikepass.com


See the next page for
installation locations
and steps.

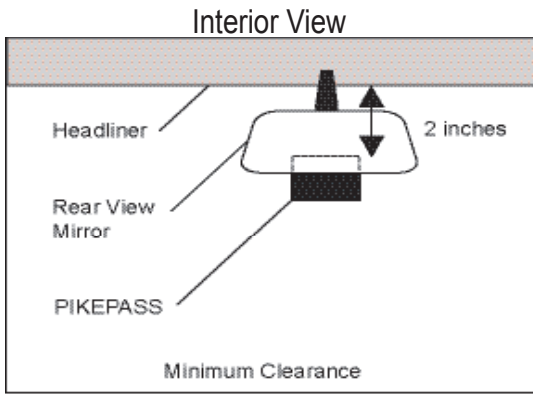

Option 1: Mirror on Headliner. Choose this option if your rear view mirror post is attached to the headliner. If the upper portion of the windshield is tinted with conductive tint, place it at least 2 inches below the tinted area. Follow the installation steps below to install the PIKEPASS Portable.

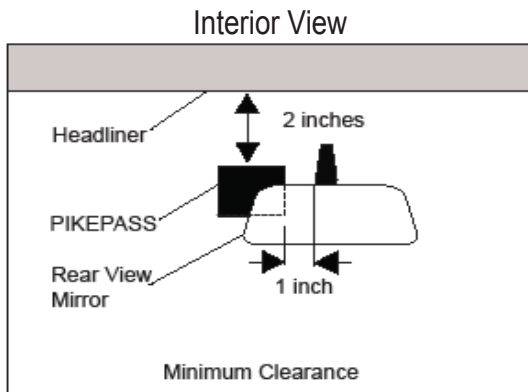

Option 2: Mirror Attached High. Choose this option if your rear view mirror post is attached high on the windshield. If the upper portion of the windshield is tinted with conductive tint, place it at least 2 inches below the tinted area. Follow the installation steps below to install the PIKEPASS Portable.

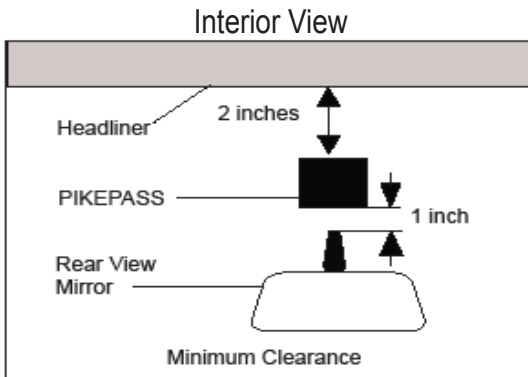

Option 3: Mirror Attached Low. Choose this option if your rear view mirror post is attached low on the windshield. If there is an exterior visor across the windshield, place the PIKEPASS Portable at least 2 inches below the visor. Follow the installation steps below to install the PIKEPASS Portable.

INSTALLATION STEPS

1. Choose a location for installation from the above options.
2. Clean and dry the windshield area before installing.
3. Arrange the suction cup tabs so they are sticking out above and below the tag (See page 1). You'll be able to quickly and easily remove the tag by pulling on the tabs.
4. Press the suction cups firmly against the windshield so a vacuum seal is formed.


SPECIAL NOTES

Tinted Windshields-Some vehicles have a conductive tinted area across the top of the windshield that might interfere with reading the PIKEPASS Portable. If your windshield has this tint, you can install it at least 2 inches below the tinted area. Nonconductive tint does not affect performance.

Metal Sun Visors-If your vehicle has an exterior-mounted metal sun visor across the top of the windshield, install the PIKEPASS Portable at least 2 inches below the visor.

Motorcycle *PIKEPASS* mount instructions:

The hard case portable *PIKEPASS* is required for motorcycles. The suction cups will be included in the package, but do not use them on your motorcycle. The *PIKEPASS* can be placed horizontally in a pocket, saddle bag, etc... to prevent it from falling off and breaking.

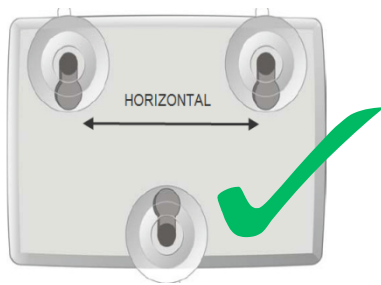

**PASS WILL READ ONLY WHEN
POSITIONED HORIZONTALLY.**



Note: Please monitor your PIKEPASS Activity Statement regularly to ensure your pass is reading properly.